

| | | |
|---------------------|-----------|-----------|
| All values are hex: | | |
| Format: | NEC | |
| System Code: | 0x6A13 | |
| | | |
| Commands: | hex value | dec value |
| POWER OFF | 0x10 | 16 |
| POWER ON | 0x11 | 17 |
| POWER TOGGLE | 0x12 | 18 |
| VOLUME DOWN | 0x13 | 19 |
| VOLUME UP | 0x14 | 20 |
| MUTE OFF | 0x15 | 21 |
| MUTE ON | 0x16 | 22 |
| MUTE TOGGLE | 0x17 | 23 |
| INPUT 1 | 0x18 | 24 |
| INPUT 2 | 0x19 | 25 |
| INPUT 3 | 0x1A | 26 |
| INPUT 4 | 0x1B | 27 |
| INPUT 5 | 0x1C | 28 |
| INPUT 6 | 0x1D | 29 |
| BALANCE | 0x1E | 30 |
| TONE OFF | 0x1F | 31 |
| TONE ON | 0x20 | 32 |
| TONE TOGGLE | 0x21 | 33 |
| INVERT OFF | 0x22 | 34 |
| INVERT ON | 0x23 | 35 |
| INVERT TOGGLE | 0x24 | 36 |